


## *My T105 or H105 pipe is leaking...*

These units are fitted with a drainpipe on the left-hand side of the unit. This drainpipe also shows the level of the fluid within the tank.

During normal use the drainpipe should be clipped into the holder with the stainless-steel end bung in place.


Due to the ultrasonic agitation the drainpipe may become loose during normal operation and the joint may leak.

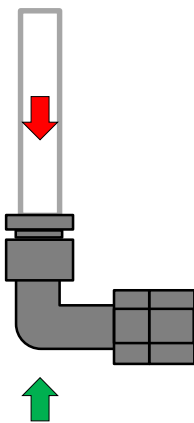

The pipe can be re-seated as follows:

- Drain the unit.
- Place the unit on a firm surface.
- Make sure the pipe is unclipped from the holder on the tank.
- Firmly push the pipe in the direction of the red arrow whilst support the swivel joint in the direction of the green arrow

If this unit still leaks, remove the pipe, clean and replace as follows:

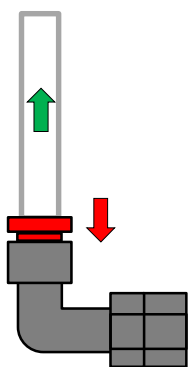

- Drain the unit.
- Place the unit on a firm surface.
- Make sure the pipe is unclipped from the holder on the tank.
- Firmly push the releasing ring shown in red in the direction of the red arrow.
- Whilst doing that, firmly pull the pipe in the direction of the green arrow, being careful not to catch the pipe on the tank.
- Replace the pipe by moistening the end of the pipe and firmly pressing it into the lower pipe holder.

In line with the maintenance instruction on page 28 of the H105 Operators Handbook, the pipe should be inspected for leaks DAILY and the above action taken. Failure to do this could result in refusal of any warranty claims.

Please contact Walker Electronics Limited on 01636 892410 if you have any further problems.